## **CM\_ Room Thermostat** Hardwired

## Page 1 of 1

## **Installation Instructions**

For use in normal environments



The above image displayed is product CM2, design of other products in the CM\_ range may vary.

Important: Keep this document



**CAUTION!** 

Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.

- Before commencing any work on the electrical connections, you must first disconnect the thermostat from the mains.
- None of the 230V connections must be live until the installation has been completed and the housing is closed.
- Only qualified electricians or authorised service staff are permitted to open the thermostat.
- There are parts that carry mains voltage behind the cover. The thermostat must not be left unsupervised when open. (Prevent non specialists and especially children from gaining access to it.)
- If the thermostat is used in a way not specified by the manufacturer, its safety may be impaired.
- Prior to setting the thermostat, it is neccessary to complete all required settings described in this section.

This thermostat can be mounted in the following ways:

1. To a recessed conduit box 2. To a surface mounted box 3. Directly mounted on wall













