


## Heat Alarm

### Installation and maintenance



**ALWAYS** read the **ENTIRE** user manual and keep it in a safe place!  
**ALWAYS** install your alarms in accordance with user manual.  
**ALWAYS** make sure you understand the lights and sounds.  
**INTERLINK** to other smoke alarms and heat alarms if possible.

#### 1 CHOICE AND LOCATION OF ALARMS

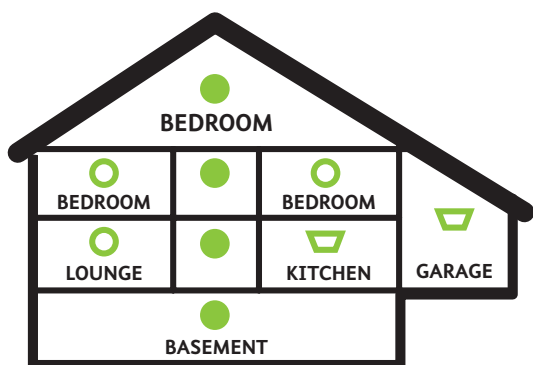


- SMOKE ALARMS FOR MINIMUM PROTECTION
- SMOKE ALARMS FOR INCREASED PROTECTION
- ▽ HEAT ALARMS

● **OPTICAL SMOKE ALARMS** are suitable for sensing smouldering fires in escape routes, lounges and bedrooms which may contain furniture, bedding and clothes.

▽ **HEAT ALARMS** are most suitable for kitchens, boiler rooms, workshops and garages where dust, dirt and moisture would contribute to nuisance alarms.

**NOTE:** Heat alarms should not be used in escape routes and it is recommended they are interlinked to smoke alarms. Do not install heat alarms on walls or in bedrooms, nurseries, playrooms or areas where the elderly and disabled may spend long periods of time.

## 2 ALARM POSITIONING

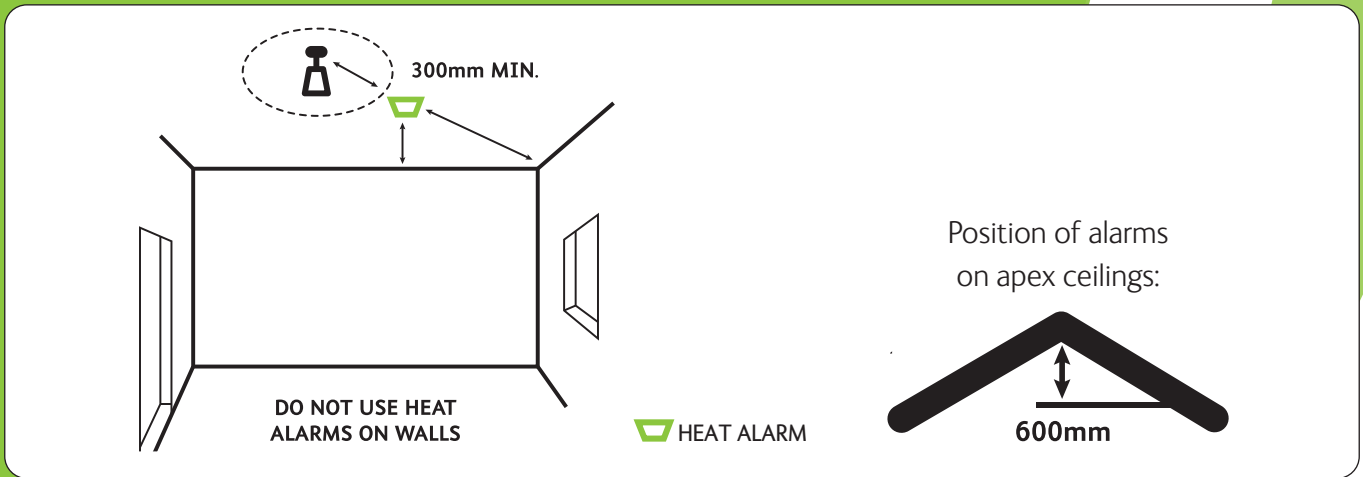

## 3 HEAT ALARM LOCATION

### HEAT ALARMS

**REMEMBER**, heat alarms need a fire to activate, flames **WILL** be present.

**Do NOT** install on walls

**Do NOT** use in escape routes

If a heat alarm has an interlink facility it should be connected with an interlinkable smoke alarm

**Do NOT** use in lounges, bedrooms and separate dining rooms where smoke alarms are best

**AVOID** use in areas where children, the elderly and disabled are normally present

**DESIGNED** for kitchens, garages, cellars, attics where steam, vapours, dust, and cobwebs may cause nuisance alarms from smoke alarms

**KEEP 300mm AWAY** from lights and appliances that generate heat. (Tungsten and low voltage bulbs) (Sensor temperature range 54°C – 65°C)

**KEEP AWAY** from objects that could divert or prevent smoke and heat from reaching them, ie beams and other ceiling features.

**KEEP AWAY** from extractor fans

## 4 MAINTAIN YOUR ALARM

Test once a week



Wipe with damp cloth every six months



Vacuum with a soft brush every six months

